

VENTO TENT INSTRUCTION



1

After unpacking the vento tent for the transport bad, put it on a flat and clean surface.
Place the legs as pictured.



2

Spin the safety valves on legs.




3

The first step is to inflate the leg opposite to each other.



4

Inflate the third leg (pictured). Do the same with the fourth leg.

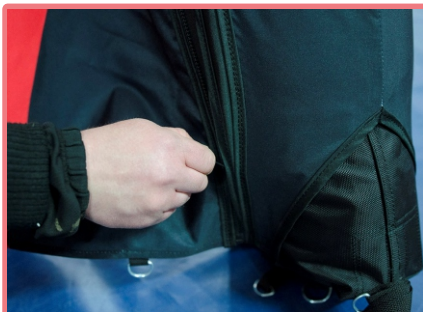

5

When the vento tent is inflated, start to fasten the walls with zippers.



6

Before you use the tent, attach it to the ground using a set of pins and ropes.

REMOVAL: Remove the side walls, the pins and ropes. Then unscrew the valves in the legs. Put the deflated tent on a flat surface, the legs should be places in one direction. Release any trapped air from the tent rolling it towards the top ov the valve.